LINKSYS®

Quick Installation

For Windows XP *ONLY*

This Quick Installation is meant to help you install the product quickly and easily. For detailed instructions on installation, configuration, and further setup options, please consult the User Guide.

Instant Wireless® Series

Wireless-B Notebook Adapter

WPC11 ver. 4

Package Contents

- One Setup Wizard CD-ROM with User Guide (1)
- One Wireless-B Notebook Adapter (2)
- One Quick Installation guide
- One Registration Card

1 Connecting the Notebook Adapter

A. Turn off your notebook PC.

B. Locate an available PC Card slot on your notebook PC.

C. Insert the Adapter with the label side facing up, so the Adapter fits snugly in the PC Card slot.

D. Restart your notebook PC.

Windows XP users: The hardware installation of the Wireless-B Notebook Adapter is complete.

Proceed to Step 2.

2 Driver Installation and Configuration for Windows XP

A. Windows XP will automatically detect the Adapter. Insert the Setup CD-ROM into your CD-ROM drive. Click the radio button next to **Install the software automatically (Recommended)**. Then click **Next**.

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Ethernet Controller
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
Next >
Cancel
A

B. The following screen mentions Windows XP compatibility. The Adapter has been tested and is compatible with Windows XP. Click the **Continue Anyway** button to continue.

C. When Windows has finished installing the driver, click **Finish**.

Continued on back

D. Windows XP has a built-in configuration tool. After installing the Adapter, the Windows XP Wireless Zero Configuration icon will appear in your computer's system tray. Double-click the icon.

Wireless Network Connection
One or more wireless networks are available.
To see a list of available networks, click here.
D

Note: Steps E and F are the instructions and screenshots for Windows XP with Service Pack 1 installed. If you have not installed Service Pack 1, select the network you want, and click the **Connect** button. If the network has WEP encryption enabled, enter the WEP key in the *Network key* field, and then click the **Connect** button.

E. The screen that appears will show any available wireless network. Select the network you want.

If this network has WEP encryption enabled, go to Step F.

If this network does not have WEP encryption enabled, then the screen in Figure E will appear. Make sure the box next to *Allow me to connect to the selected wireless network, even though it is not secure* is checked. Then click **Connect**, and go to Step G.

Wireless Network Connection
The following wireless network(s) are available. To access a wireless network, select it from the list, and then click Connect.
Available wireless networks:
linksys
This wireless network is not secure. Because a network key (WEP) is not used for authentication or for data encryption, data sent over this network might be subject to unauthorized access.
Allow me to connect to the selected wireless network, even though it is not secure
If you are having difficulty connecting to a network, click Advanced.
Connect
Cancel
E

F. If WEP is enabled, the screen in Figure F will appear. Enter the WEP key of your wireless network in the *Network key* field, and re-enter it in the *Confirm network key* field. Then click **Connect**.

Important: Windows XP Wireless Zero Configuration does not support the use of a passphrase. Enter the exact WEP key used by your access point.

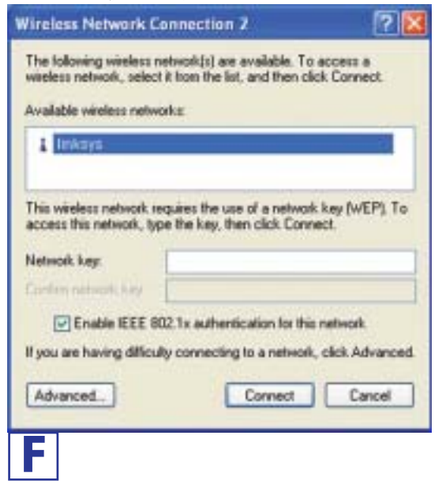
Wireless Network Connection 2
The following wireless network(s) are available. To access a wireless network, select it from the list, and then click Connect.
Available wireless networks:
linksys
This wireless network requires the use of a network key (WEP). To access this network, type the key, then click Connect.
Network key:
Confirm network key:
Enable IEEE 802.1x authentication for this network
If you are having difficulty connecting to a network, click Advanced.
Advanced...
Connect
Cancel
F

G. The screen in Figure G will appear if your connection is active.

For more information about wireless networking on a Windows XP computer, enter the keyword **wireless** in the Windows XP search engine.

Windows XP users: Congratulations! The installation of the Wireless-B Notebook Adapter is complete.

For additional information or troubleshooting help, refer to the User Guide on the Setup CD-ROM. You can also call or email for further support.

24-hour Technical Support	***800-326-7114 (toll-free from US or Canada)***
E-mail Support	***support@linksys.com***
Website	***http://www.linksys.com or http://support.linksys.com***
RMA (Return Merchandise Authorization)	***http://www.linksys.com/support***
FTP Site	***ftp://ftp.linksys.com***
Sales Information	***800-546-5797 (800-LINKSYS)***

WPC11_v4-QI_XP-30402A KL